

Feuchte-Sensor 1  
(Analog 3)

Feuchte-Sensor 2  
(Analog 4)

Ext.Temperatur  
(Analog 11)

Feuchte-Sensor 3  
(Analog 5)

Feuchte-Sensor 4  
(Analog 6)

Feuchte-Sensor 5  
(Analog 7)

(Klemme 98 nur für Feuchte-Sensoren)  
Kabel Klemme 98 können extern am Sensor gedrückt werden  
98(andere Sensor 59)/+5V

98(others 62)/+5V  
63/A14

80 oder 71/+5V  
78/A11  
98(andere Sensor 62)/+5V  
64/A15  
Feuchte-Sensor 98/andere 71/+5V  
72/AG

98(andere Sensor 71)/+5V

Transformator 10-30V

Zähler 1: 84+86

Zähler 2: 85+86

Last 1 +12V:35

Last 1 Minus 36

37/+

38 Minus (mit Batterie laden)

33 Minus (ohne Batterie laden)

93/Tele+

94/Tele-

9pin Canon-Stecker

71/+5V laden

220V AC

220V direkt

220V

220V direkt

220V direkt



Telefon-



LDR (Licht-Sensor)  
(Analog 9)

Netzwerk und Internet mit TCP/IP



Solar+

Solar-  
Ext.Klemmes

47/+5V

48/Digital1

7

12

220V


220V direkt



Pumpe 5



Pumpe 1

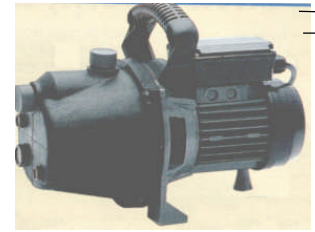


Pumpe 2



12V Batterie



Pumpe 3

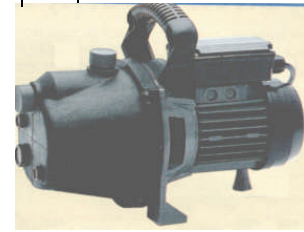

Pumpe 4



Niveau Stop Pumpe



Niveau Start Pumpe



Niveau Min  
(Alarm)

externe Verdrahtung  
Bewässerungssystem